

LED Blink Codes:

At power up, # of green blinks indicates configured throttle type:

- 1 Green = 0-5k
- 2G = 5k-0
- 3G = 0-5V
- 4G = EZ-Go Inductive
- 5G = Yamaha 0-1K
- 6G = Taylor-Dunn 6-10.5V
- 7G = CLUBCAR 5K-0, 3-wire

Normal display status:

- Solid Green: Controller ready to run
- Solid Red: Controller in programming mode
- Solid Yellow: Controller throttle is wide open, controller is supplying max output, and is not in current limit.

Error code display # of RED blinks indicates error

- 1Red = Throttle Position Sensor Over Range
- 2R = Under Temperature. Controller below -25C
- 3R = HPD. Throttle hasn't gone to zero during this power on cycle.
- 4R = Over Temperature. Controller over 95C
- 5R = unused
- 6R = Battery Under Voltage detected. Battery V < undervoltage slider
- 7R = Battery Over Voltage detected. Battery V > overvoltage slider